


Lab 10.1.6 Multiple Active Host Sessions

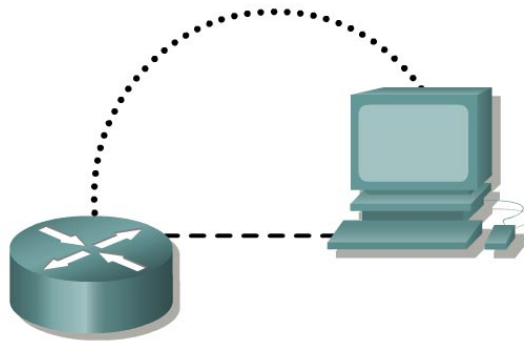

Router designation	Router name	FA0/0 Address	Subnet mask	Enable secret password	Enable/VTY/ and Console passwords
Router 1	GAD	192.168.14.1	255.255.255.0	class	cisco

Straight-through cable	—————
Serial cable	————— <del> </del>
Console (Rollover)	
Crossover cable	- - - - -

Objective

- Enable HTTP services on a router.
- Observe multiple HTTP and Telnet sessions on a single host using `netstat`.

Background/Preparation

Cable a network similar to the one in the diagram. Any router that meets the interface requirements displayed on the above diagram, such as 800, 1600, 1700, 2500, 2600 routers, or a combination, may be used. Please refer to the chart at the end of the lab to correctly identify the interface identifiers to be used based on the equipment in the lab. The configuration output used in this lab is produced from 1721 series routers. Any other router used may produce a slightly different output. The following steps are intended to be executed on each router unless specifically instructed otherwise.

Start a HyperTerminal session as performed in the Establishing a HyperTerminal session lab.

Note: Work in teams of 2. Team member 1 should cable and configure the routers and workstations according to the chart. This will introduce some errors. Team member 2 should test the configuration using physical inspection, ping and Telnet.

Note: Go to the erase and reload instructions at the end of this lab. Perform those steps on all routers in this lab assignment before continuing.

Step 1 Configure the hostname, passwords and interfaces on the Gadsden router

- a. On the Gadsden router, enter the global configuration mode and configure the hostname as shown in the chart. Then configure the console, virtual terminal, and enable passwords. Configure the Ethernet interface.

Step 2 Save the configuration information from the privileged EXEC command mode

```
GAD#copy running-config startup-config
```

Step 3 Configure the host with the proper IP address, subnet mask, and default gateway

Step 4 Allow HTTP access to the router

- a. Allow HTTP access by issuing the `ip http server` command in global configuration mode.

Step 5 Use the workstation browser to access the router

- a. Open a browser on Host 1 and type `http://ip-address of Router GAD`. Then there will be a prompt for the enable password of the router.

Step 6 Telnet to the Ethernet interface on the router from the host

Step 7 Start a second Telnet session to the router

Step 8 Check the sessions on the host

- a. Enter the `netstat` command from the Command / DOS prompt.
- b. How many sessions are running on the host? _____
- c. Explain why the Web browser is not listed as an active session.

Once this is finished, erase the start-up configuration on both. Then remove and store the cables and adapter. After that, log off and turn the router off.

Erasing and reloading the router

Enter into the privileged EXEC mode by typing **enable**.

If prompted for a password, enter **class**. If “class” does not work, ask the instructor for assistance.

```
Router>enable
```

At the privileged EXEC mode, enter the command **erase startup-config**.

```
Router#erase startup-config
```

The responding line prompt will be:

```
Erasing the nvram filesystem will remove all files! Continue?  
[confirm]
```

Press **Enter** to confirm.

The response should be:

```
Erase of nvram: complete
```

Now at the privileged EXEC mode, enter the command **reload**.

```
Router(config)#reload
```

The responding line prompt will be:

```
System configuration has been modified. Save? [yes/no]:
```

Type **n** and then press **Enter**.

The responding line prompt will be:

```
Proceed with reload? [confirm]
```

Press **Enter** to confirm.

In the first line of the response will be:

```
Reload requested by console.
```

After the router has reloaded the line prompt will be:

```
Would you like to enter the initial configuration dialog? [yes/no]:
```

Type **n** and then press **Enter**.

The responding line prompt will be:

```
Press RETURN to get started!
```

Press **Enter**.

The router is ready for the assigned lab to be performed.

Router Interface Summary					
Router Model	Ethernet Interface #1	Ethernet Interface #2	Serial Interface #1	Serial Interface #2	Interface #5
800 (806)	Ethernet 0 (E0)	Ethernet 1 (E1)			
1600	Ethernet 0 (E0)	Ethernet 1 (E1)	Serial 0 (S0)	Serial 1 (S1)	
1700	FastEthernet 0 (FA0)	FastEthernet 1 (FA1)	Serial 0 (S0)	Serial 1 (S1)	
2500	Ethernet 0 (E0)	Ethernet 1 (E1)	Serial 0 (S0)	Serial 1 (S1)	
2600	FastEthernet 0/0 (FA0/0)	FastEthernet 0/1 (FA0/1)	Serial 0/0 (S0/0)	Serial 0/1 (S0/1)	
In order to find out exactly how the router is configured, look at the interfaces. This will identify the type of router as well as how many interfaces the router has. There is no way to effectively list all of the combinations of configurations for each router class. What is provided are the identifiers for the possible combinations of interfaces in the device. This interface chart does not include any other type of interface even though a specific router may contain one. An example of this might be an ISDN BRI interface. The string in parenthesis is the legal abbreviation that can be used in IOS command to represent the interface.					